



Stop

Press STOP to halt any operation. Hold STOP for 3 seconds to turn off unit.

Bidet

Feminine wash(front)
Runs 2 minutes unless you press STOP

Massage

Nozzle moves forward and back intermittently. Adjustable stream width. Can also be used in Child mode.



Massage Control

Massage width is adjusted during massage operation. (DIB-1300/1500 can be used with Child Use)

Dry

Will run total of 3 minutes unless you press STOP

HI / LO


Adjusts water pressure on WASH/BIDET/ENEMA
Adjusts air temperature on DRY

Water Temp

Adjusts temperature (93°/96°/100°F)
(34°/36°/38°C)

Energy Saving

Press Button (repeatedly)
1st. Automatic mode
2nd. Learn Energy saving Mode
3rd. Cancel

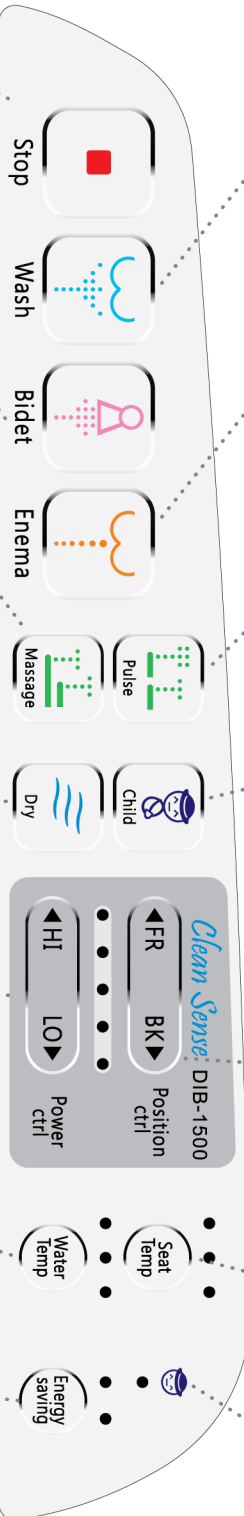

Wash

Washes posterior(back).
Runs 2 minutes unless you press STOP

Enema Wash

To ease constipation.
Runs 2 minutes unless you press STOP

Pulse

Pulsating water stream (Strong/Weak) Use with Wash/Bidet/Enema Wash

Child

Safety Mode;
Nozzle moves forward; water pressure reduced. Do not run with Enema Wash function

FR / BK

Front/Back Adjusts nozzle location in Wash /Bidet/Enema function

Seat Temp

Adjusts temp of seat (93°/100°/107°F)
(34°/38°/42°C)

❄️ Child mode indicator light